

# **Anterior**Chairside Preparation Guide

#### For IPS e.max® Restorations


		IPS e.max Ceram/ZirPress	IPS e.max ZirCAD	IPS e.max CAD	IPS e.max Press
Anterior	Crown		X	X	X
	Veneer	X			
	Bridge		Х		Х
Posterior	Crown		Х	X	Х
	Bridge		Х		

**all** ceramic **all** you need




# **Full-Coverage Restorations**

## ANTERIOR CROWN PREPARATION

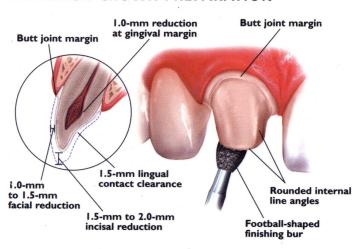

# **3-Unit Bridge Restorations**


## 3-UNIT BRIDGE PREPARATION

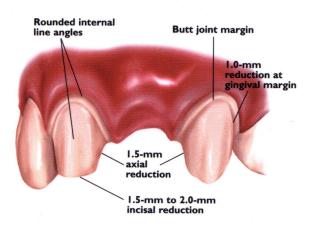

# **Veneers**


#### **VENEER PREPARATION**

A medium grit, round-ended, diamond bur is used to remove a uniform thickness of facial enamel by joining the depth-cut grooves.

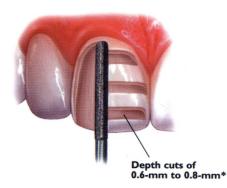


#### **INCISAL PREPARATION**

The diamond bur is angled to bevel back the incisal edge.

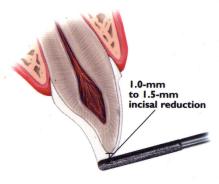

### **CHAMFER MARGINS**

Correct preparation of the chamfer margins interproximally allows the appropriate bulk of porcelain.

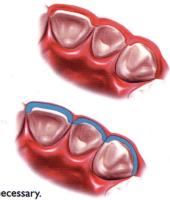

\*Please note: For additional masking capabilities and/or layering techniques, further reduction may be necessary.

Contact your laboratory for further information.